
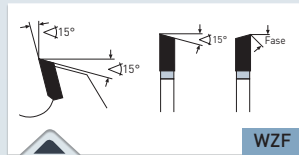


Acrylglas (Plexiglas) Klarschnitt
Acrylic (Plexiglas) clear cut view

10 9050

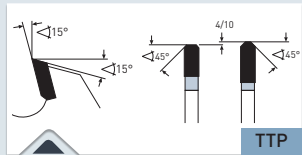

> Trapez Flach Positiv
> Triple-chip / flat tooth positive

> Wechselzahn-Fase
> Alternate top bevel+bevel

MASCHINE · MACHINE

Für Tischkreissägen, Formatsägen, Plattenaufteilsägen

For table-mounted circular saws, final trimming saws, panel sizing saws

✓ OPTIMAL · OPTIMAL ✓ GUT · GOOD ✓ MÖGLICH · POSSIBLE

✓		Kunststoffe, Plexiglas, Duro- und Thermoplaste	Plastics, plexiglass, acrylics, duro- and thermoplastics
✓		Mineralische/acrylgebundene Massivplatten/Küchenplatten: Corian®, Noblan®, Hi-Macs®, Staron®, Rausolid®, Varicor®	Mineral/acrylic bound solid boards/kitchen worktops: Corian®, Noblan®, Hi-Macs®, Staron®, Rausolid®, Varicor®
✓		HPL-Duroplastische Schichtstoffplatten/Fassadenplatten: Trespa®, Resopal®, Duropal®, Formica®, Kronospan®, Decodur®	HPL High-Pressure-Laminate solid boards/façade panels: Trespa®, Resopal®, Duropal®, Formica®, Kronospan®, Decodur®

ANWENDUNG · APPLICATION

Für Fertigschnitte, Klarschnitt in homogene Werkstoffe, Thermoplaste wie Acrylglas (Plexiglas) PC, PMMA.

Wenigzahn Ausführung (TTP): Thermoplast im Paketschnitt. Zugfestigkeit > 50 N/mm².

Vielzahn Ausführung (WZF): Thermoplast dünnwandig. Zugfestigkeit max. 50 N/mm².

Empfehlung: Kühlung mit Emulsion, siehe ab Seite 1212.

For finishing cut, clear cut view in homogenous material, thermoplastics such as acrylic (plexiglass), PC, PMMA.

Low tooth number (TTP): Thermoplastics, for stacks of material. Tensile strength > 50 N/mm².

High tooth number (WZF): Thermoplastics, thin-walled. Tensile strength max. 50 N/mm².

Recommendation: Use emulsion as a coolant, see from page 1212.

Art.							
10 9050 250 010	● 250	3,2/2,2	30	48 TTP	UNI	✓	
10 9050 250 020	● 250	3,2/2,2	30	80 WZF	UNI	✓	
10 9050 300 010	● 300	3,2/2,2	30	60 TTP	UNI	✓	
10 9050 300 020	● 300	3,2/2,2	30	96 WZF	UNI	✓	
10 9050 350 010	● 350	3,5/2,5	30	72 TTP	UNI	✓	
10 9050 350 020	● 350	3,5/2,5	30	108 WZF	UNI	✓	

UNI = 2-10-60 + 2-9-46,4 + 2-7-42


Weitere Abmessungen auf Anfrage
Other dimensions are available on request

Bombierter Flankenstil

Bossed edge style

Bitte nur Zahnbrust nachschleifen. Nicht den Umfang (Freifläche Zahnrückten). Ca. 5x nachschleifbar bei normaler Abstumpfung.

Please only regrind the face, but never the top. Approximately five times regrindable with normal blunting.

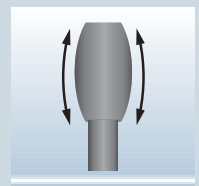

Film
Movie

